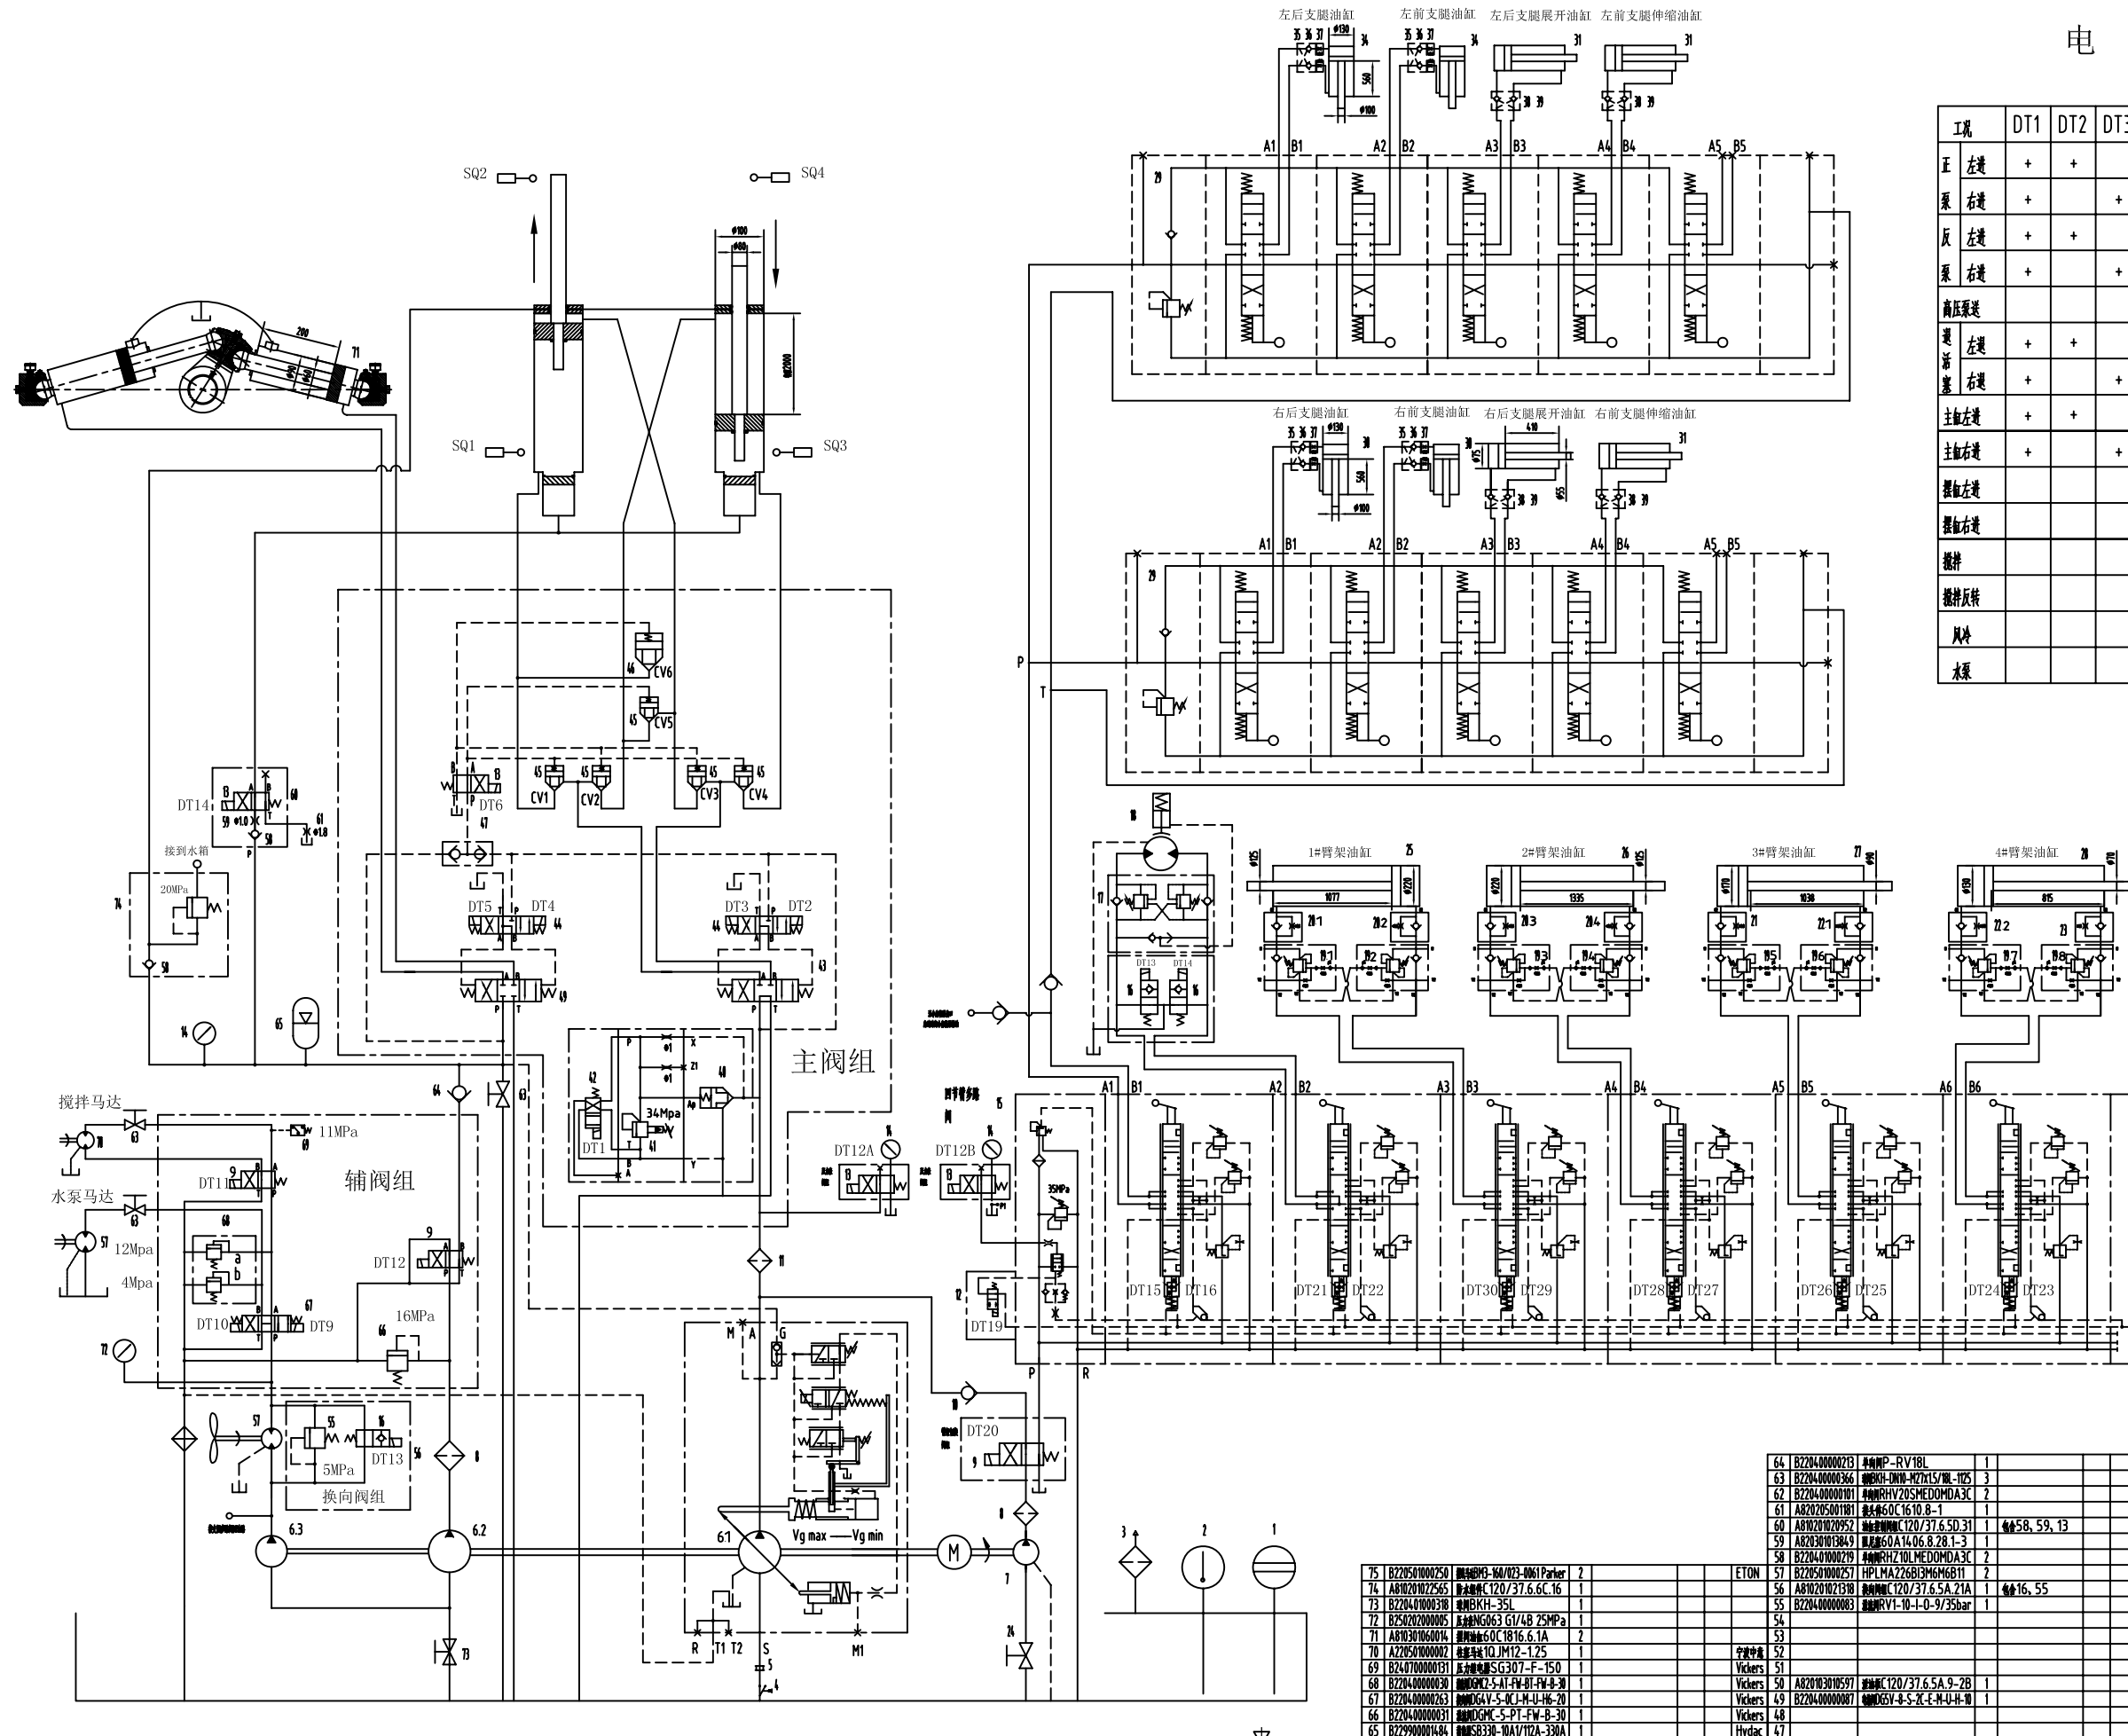


B4、小排量泵车液压系统原理图（电控换向）

电 磁 铁 动 作 表

工况		DT1	DT2	DT3	DT4	DT5	DT6	DT9	DT10	DT11	DT12	DT13	DT14
正泵	左进	+	+		+						+		
	右进	+		+		+					+		
反泵	左进	+	+			+					+		
	右进	+		+	+						+		
高压泵送							+						
进泵室	左进	+	+				+				+		+
	右进	+		+			+				+		+
主缸左进		+	+				+				+		
主缸右进		+		+			+				+		
摆缸左进					+						+		
摆缸右进						+					+		
摆杆								+					
摆杆反转								+		+			
风冷												+	
水泵									+				

[illegible]