
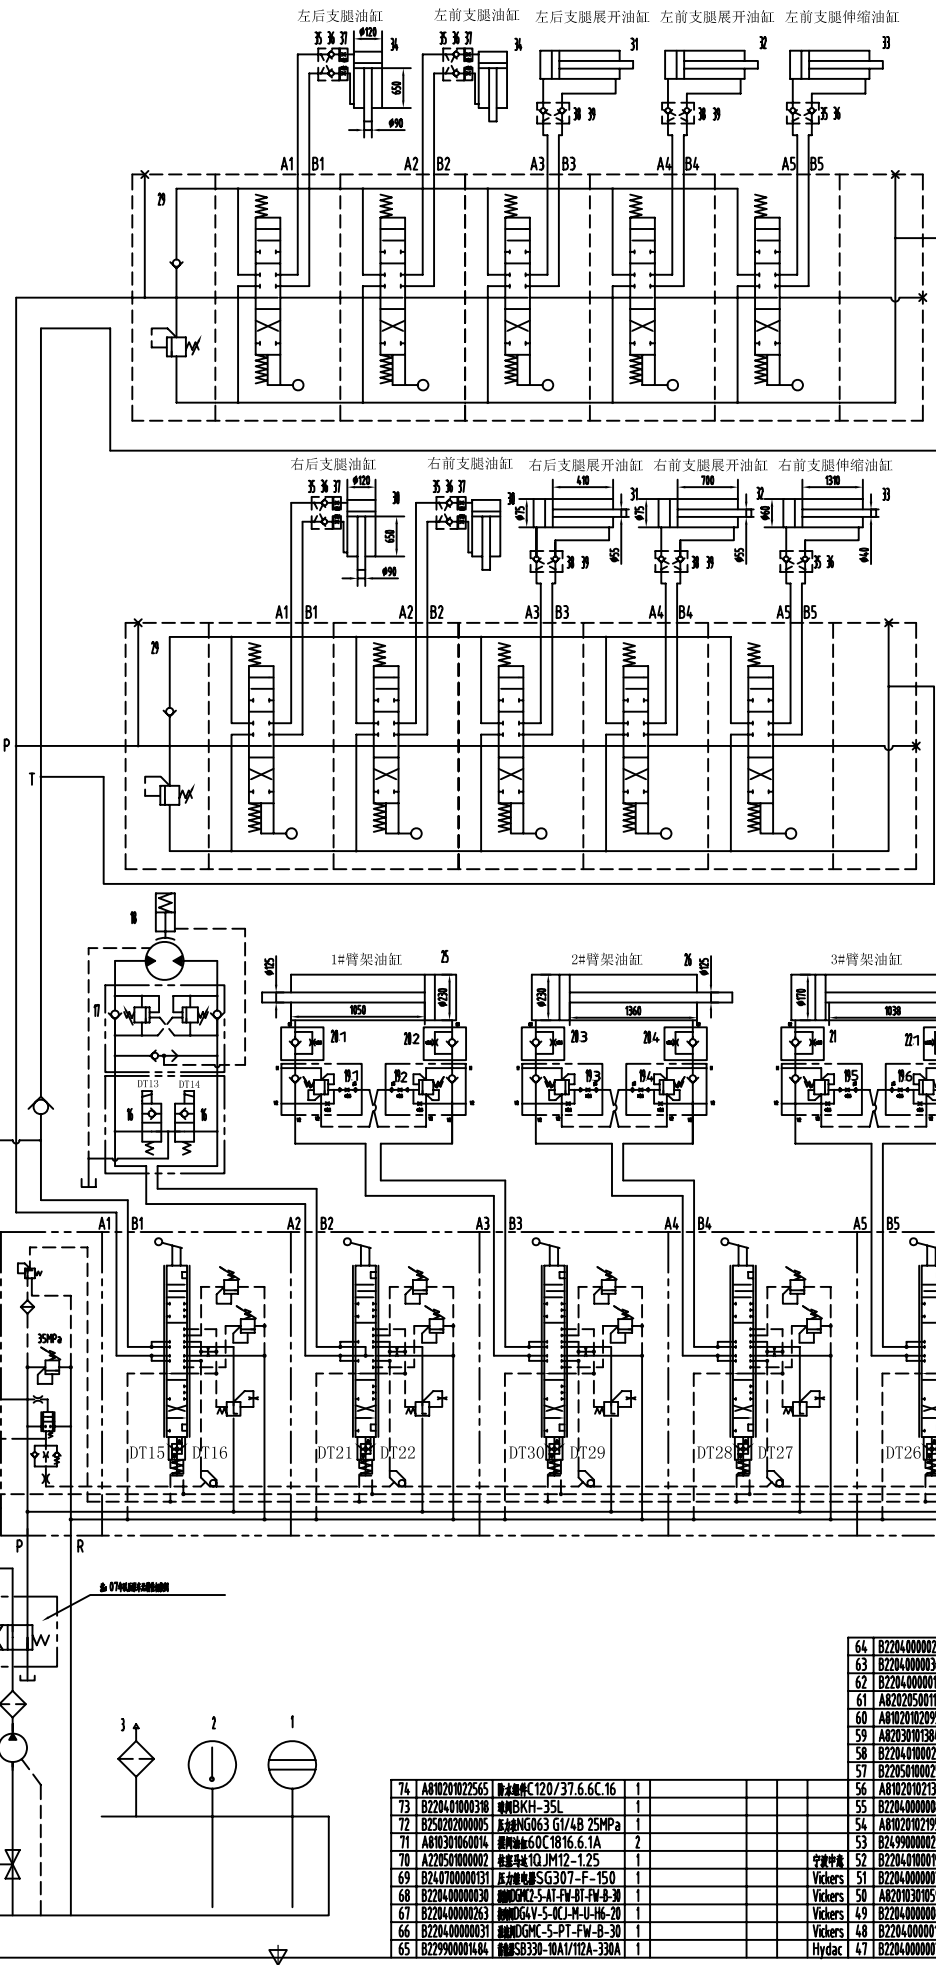


B5、小排量泵车液压系统原理图（液压换向）

电 磁 铁 动 作 表

工况	DT1	DT2	DT3	DT4	DT5	DT6	DT7	DT8	DT9	DT10	DT11
低压	正泵	+	+						+		
	反泵	+		+	+				+		
高压	正泵	+	+		+				+		
	反泵	+		+	+				+		
点动前进	+		+	+					+		
点动后退	+		+						+		
预热	+		+						+		
摆缸进									+		
摆缸退				+					+		
搅拌正转						+					
搅拌反转						+		+			
风冷开关										+	
水泵							+				
退出	+		+		+				+	+	+
保持			+		+				+	+	+
恢复			+		+				+		

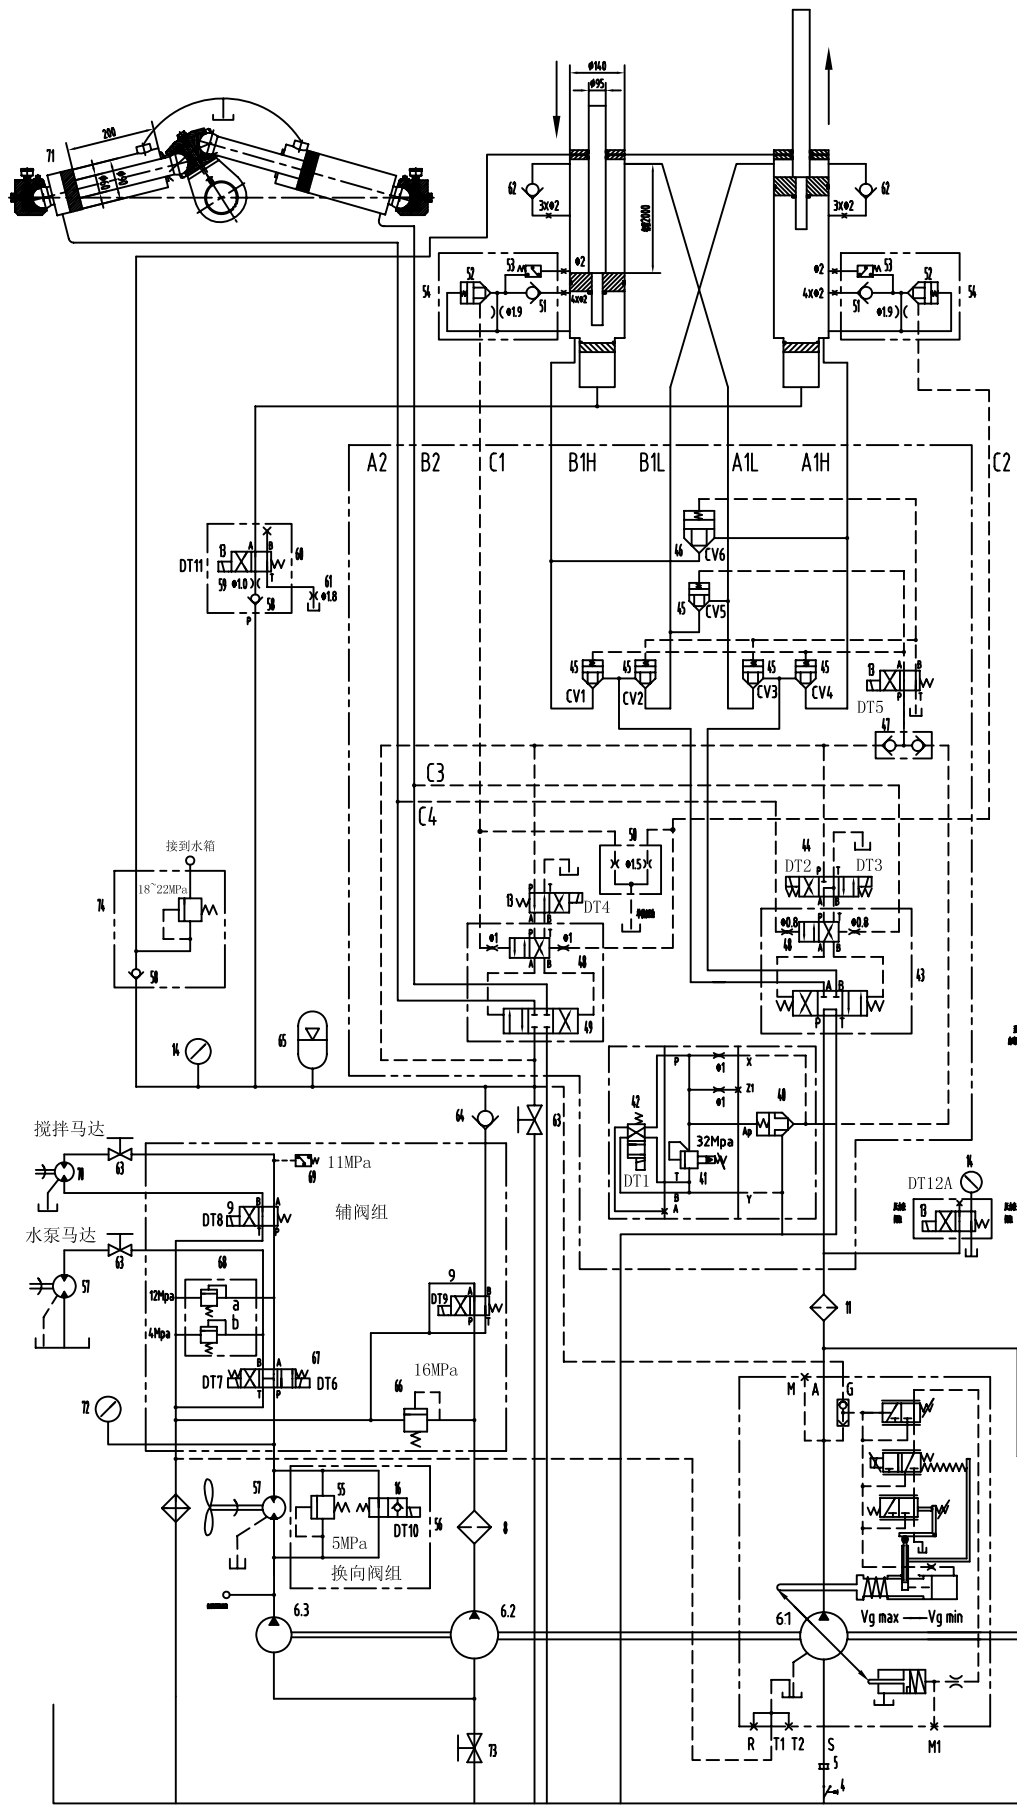

46	B2400000071	换向阀CV1-NG40-D20-L	1								Vickers
45	B22040000040	换向阀CV1-NG32-D20-L-40	5								Vickers
44	B22040000061	换向阀CV1-8-S-X-E-M-U-H-10	1								Vickers
43	B22040000191	换向阀DG3V-10/DG3V-3	1								Vickers
42	B22040000071	换向阀GV-3-2AL-M-U-H-60	1								Vickers
41	A22040000150	换向阀VU-32-C3-W-H	1								Vickers
40	B22040000033	换向阀CV1-32-D10-H-40	1								Vickers
39	B22040000072	换向阀CV3-8-P-0-010	4								Vickers
38	A81020102092	换向阀C120/37.6.1.35.1	4								
37	A81020101075	换向阀C120/37.6.1.63-2	4								
36	B22040000074	换向阀POCT-10-F-0-100	6								Vickers
35	A81020102093	换向阀C120/37.6.1.63.1	6								
34	A81020101040	换向阀C120/37.2.12.2A	2								
33	A81020101035	换向阀C120/37.2.12A	2								
32	A81020101037	换向阀C120/37.2.8A	2								
31	A81020101036	换向阀C120/37.2.6A	2								
30	A81020101039	换向阀C120/37.2.14A	2								
29	B22040000130	换向阀SOS/5-P	2								派克
28	A81020102146	换向阀C120/37.1.11B	1								
27	A81020102093	换向阀C120/37.1.17A	1								
26	A81020102113	换向阀C120/37.1.13A	1								
25	A81020102091	换向阀C120/37.1.11A	1								
24	A22040000155	换向阀Z15W-16T	1								
23	B22040000139	换向阀Q4460900002000	1								
22	B22040000320	换向阀Q4460900003000	2								
21	B22040000321	换向阀Q4460900006000	1								
20	B22040000322	换向阀Q4460900007000	1								
19	B22040000254	换向阀O83510031802010	4								
18	B22040000013	换向阀T3150/MN-S9	1								
17	B22040000073	换向阀V5-10-C-A-100-07-25	1								
16	B22040000182	换向阀SV3-10-0-0-24DG	3								
15	B22040000376	换向阀PSL4/F/330-3-32L	1								
14	B25020100006	换向阀G63/G148 40MPa	3								
13	B22040000079	换向阀GV-3-2A-M-U-H-60	5								
12	B220401000311	换向阀多路换向阀W/NIF	1								
11	B222100000317	换向阀FBN/HK800F1081V-B6	1								
10	B22040000001	换向阀HV20SMEDMDA3C	1								
9	B22040000150	换向阀GV-5-2A-M-U-H-20	1								
8	B22990000010	换向阀FBN/HK330G1081x	1								
7	B22040000036	换向阀H-10W-H27X5/MS-105	3								
6	B22040000001	换向阀HV20SMEDMDA3C	2								
5	A22200000004	换向阀DT-100	1								
4	A81020102063	换向阀C120/37.2A.10	1								
3	A22210000020	换向阀F3-4.0	1								
2	A25020400005	换向阀WSS-401Y	1								
1	A25010000029	换向阀WZ-150T	1								

74	A81020102565	换向阀C120/37.6.6C.16	1								
73	B22040000310	换向阀DKH1-35L	1								
72	B25020100005	换向阀G63/G148 25MPa	1								
71	A81020102014	换向阀60C1610.8-1	2								
70	A22050100002	换向阀1Q JH12-1.25	1								
69	B24070000031	换向阀SG307-F-150	1								
68	B22040000030	换向阀CV3-AT-FW-B1-FW-B-3	1								
67	B22040000263	换向阀GV-5-2A-M-U-H-20	1								
66	B22040000031	换向阀GV-5-PT-FW-B-30	1								
65	B22990000146	换向阀SB330-10A1/112A-330A	1								

64	B22040000213	换向阀PV-18L	1								
63	B22040000366	换向阀H-10W-H27X5/MS-105	3								
62	B22040000001	换向阀HV20SMEDMDA3C	2								
61	A81020102014	换向阀60C1610.8-1	2								
60	A81020102092	换向阀C120/37.6.50.31	1								
59	A81020101384	换向阀60A1406.8.28.1-3	1								
58	B22040000219	换向阀H210L MEDMDA3C	2								
57	B22050100021	换向阀MA226B6M66811	2								
56	A81020102138	换向阀C120/37.6.5A.21A	1								
55	B22040000063	换向阀V1-10-1-0-9/35bar	1								
54	A81020102193	换向阀C120/37.6.8A.3	2								
53	B24990000230	换向阀DG40-33	2								
52	B22040000192	换向阀PS2-10-P-0-010	2								
51	B22040000072	换向阀CV3-8-P-0-010	2								
50	A81020102191	换向阀GV-5-2A-M-U-H-10	1								
49	B22040000087	换向阀GV-5-2A-M-U-H-10	1								
48	B22040000111	换向阀GV-3-2A-M-U-H-60	2								
47	B22040000072	换向阀CV3-8-P-0-010	2								

三一重工股份有限公司